

**SONY.**

3-866-793-21

# ***Trinitron® Color TV***

---

## **Operating Instructions**

*KV-32S42    KV-32V42    KV-35S42    KV-35V42*  
*KV-32S66                      KV-35S66*

© 1999 by Sony Corporation

# Remote Control

Keep this flap unfolded and use this page for reference.



**SYSTEM OFF**  
(page 14)

**TV/VTR** (page 14)

**ANT** (pages 3 and 14)

**PICTURE MODE**  
(pages 13 and 18)

**SLEEP** (page 13)


**JUMP** (page 13)

**TV/SAT**  
(page 14)

**RESET** (page 13)

**VOL +/-**

**CODE SET**  
(pages 28-30)

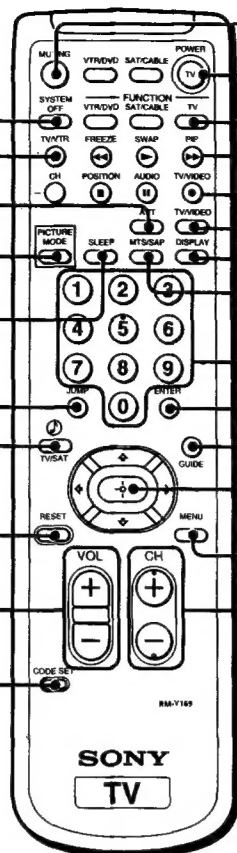

**MUTING**

**TV (POWER)**

**TV (FUNCTION)**

**PIP** (page 15)

**TV/ VIDEO** (page 14)

**DISPLAY** (page 14)

**MTS/SAP**  
(pages 14 and 19)

**0 - 9 buttons**

**ENTER**

**GUIDE** (page 14)

**Select buttons**  
(pages 11 and 16)

**MENU**

**CH +/-**

## Getting to know the buttons on the remote control

Names of the buttons on the remote control are in different colors to represent the available functions.

### Button color

Clear ..... Indicates which equipment is currently being controlled  
Green ..... Buttons relevant to power operations

### Label color

White ..... TV/VTR (VCR)/DVD/SAT/CABLE operation buttons  
Yellow ..... PIP operation buttons  
Blue ..... SAT operation buttons  
Green ..... SYSTEM OFF operation button

All references to buttons on the remote control will be highlighted with **bold text**.

## WARNING

To reduce the risk of fire or shock hazard, do not expose the TV to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### CAUTION

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OR PLUG TO WIDE SLOT, FULLY INSERT.

## CAUTION

When using TV games, computers, and similar products with your TV, keep the brightness and picture contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or picture contrast setting, the image can be permanently imprinted onto the screen. Continuously watching the same program can cause the imprint of station logos onto the TV screen. These types of imprints are not covered by your warranty because they are the result of misuse.

### Note on Caption Vision

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

### Note on cleaning the TV

Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzene, which might damage the finish of the cabinet.

### Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Use of this television receiver for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster/cable company and/or program owner.

### NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antennas.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

This document is for the remote control RM-Y168, 169.  
MODELS: KV-32S42, 32S66, 32V42, 35S42, 35S66, 35V42



As an ENERGY STAR® Partner, Sony has determined that this product or product models meets the ENERGY STAR® guidelines for energy efficiency.





ENERGY STAR® is a U.S. registered mark.

### Owners Record

The model and serial numbers are located on the front of this instruction manual and the rear panel of the TV.

Model Number \_\_\_\_\_  
Serial Number \_\_\_\_\_

## Table of Contents

|   |          |   |    |  |           |
|---|----------|---|----|--|-----------|
| <b>Important Safeguards</b> .....       | <i>i</i> | <b>Basic Set Up</b>   |    | <b>Operating Video Equipment</b>                       |           |
| <b>Welcome!</b> .....                   | <b>1</b> | Inserting batteries .....   | 11 | Programming the remote .....                           | 28        |
| <b>Precautions</b> .....                | <b>1</b> | Using the remote control move &<br>select buttons .....   | 11 | <b>Operating a Cable Box or Satellite<br/>Receiver</b> |           |
| <b>Using This Manual</b> .....          | <b>1</b> | Front panel menu control .....  | 11 | Programming the remote control .....                   | 30        |
| <b>Connecting and Installing the TV</b> |          | <b>Using Your New TV</b>  |    | <b>Troubleshooting</b> .....                           | <b>31</b> |
| Making Connections .....                | 2        | Setting up the TV automatically .....   | 12 | <b>Specifications</b> .....                            | <b>32</b> |
| Note about the AC Power Cord .....      | 3        | Watching the TV .....   | 13 | <b>Index</b> .....                                     | <b>34</b> |
| Cable or Antenna Connections .....      | 3        | Using Picture-in-Picture — PIP .....  | 15 |  |           |
| Cable Box Connections .....             | 4        | <b>Using Your Menus</b>   |    |  |           |
| VCR Connections .....                   | 5        | Learning menu selection .....   | 16 |  |           |
| Satellite Receiver Connections .....    | 7        | Quick start to the menus .....  | 17 |  |           |
| DVD Player Connections .....            | 8        | Using the VIDEO  menu .....  | 18 |  |           |
| Additional Connections .....            | 9        | Using the AUDIO  menu .....  | 19 |  |           |
| Using Special Sony Features .....       | 10       | Using the TIMER  menu .....  | 20 |  |           |
|   |          | Using the SET UP  menu ..... | 21 |  |           |
|   |          | Using the CHANNEL SET UP menu ...   | 23 |  |           |
|   |          | Using the PARENTAL CONTROL<br>menu .....  | 26 |  |           |

## Important Safeguards

For your protection, please read these instructions completely, and keep this manual for future reference.

Carefully observe and comply with all warnings, cautions and instructions placed on the set, or described in the operating instructions or service manual.

### WARNING

To guard against injury, the following basic safety precautions should be observed in the installation, use, and servicing of the set.

#### Use

##### Power Sources

This set should be operated only from the type of power source indicated on the serial/model plate. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, refer to the operating instructions.

##### Grounding or Polarization

This set is equipped with a polarized AC power cord plug (a plug having one blade wider than the other), or with a three-wire grounding type plug (a plug having a third pin for grounding).

Follow the instructions below:

##### For the set with a polarized AC power cord plug

This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the polarized plug by forcing it in.



### Alternate Warning

##### For the set with a three-wire grounding type AC plug

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.

##### Overloading

Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.

Always turn the set off when it is not to be used. When the set is left unattended and unused for long periods of time, unplug it from the wall outlet as a precaution against the possibility of an internal malfunction that could create a fire hazard.

##### Object and Liquid Entry

Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.

##### Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

##### Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set. If a snapping or popping sound from a TV set is continuous or frequent



while the TV is operating, unplug the TV and consult your dealer or service technician. It is normal for some TV sets to make occasional snapping or popping sounds, particularly when being turned on or off.

### Installation

##### Water and Moisture

Do not use power-line operated sets near water — for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.

 
 
##### Accessories

Do not place the set on an unstable cart, stand, table or shelf. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart or stand recommended by the manufacturer for the specific model of TV. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

##### Ventilation

The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.
- Never block the slots and openings by placing the set on a bed, sofa, rug or other similar surface.



## Important Safeguards (continued)

- Never place the set in a confined space, such as a bookcase, or built-in cabinet, unless proper ventilation is provided.



- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.



### Power-Cord Protection

Do not allow anything to rest on or roll over the power cord, and do not place the set where the power cord is subject to wear or abuse.



### Antennas

#### Outdoor Antenna Grounding


If an outdoor antenna is installed, follow the precautions below.

An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

**WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.**

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in USA and Section 54 of the Canadian Electrical Code in Canada provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna Grounding According to the NEC  
Refer to section 54-300 of Canadian Electrical Code for Antenna Grounding.

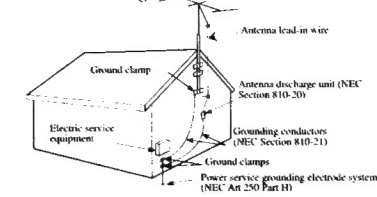

NEC: National Electrical Code

### Lightning

 
For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.

### Service

#### Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.
- If liquid has been spilled into the set.
- If the set has been exposed to rain or water.



- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.
- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.



- When the set exhibits a distinct change in performance — this indicates a need for service.

### Servicing

Do not attempt to service the set yourself since opening the cabinet may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

### Replacement Parts

When replacement parts are required, be sure the service technician certifies in writing that he has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.

### Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition, and to so certify. When the set reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the set.



## Welcome!

Thank you for purchasing the Sony Trinitron® Color TV. Before reading, check the model number located on the front of this manual.

The menus and illustrations used in these instructions are for KV-35S66. Differences in operation or features will be indicated in the text, for example, "KV-35S66 only."

| Model Number | PICTURE IN PICTURE (PIP) | SRS | SURROUND | AUTO VOLUME CONTROL |
|--------------|--------------------------|-----|----------|---------------------|
| KV-32S42     |                          |     | •        |                     |
| KV-32S66     | •                        |     | •        |                     |
| KV-32V42     |                          | •   |          | •                   |
| KV-35S42     |                          |     | •        |                     |
| KV-35S66     | •                        |     | •        |                     |
| KV-35V42     |                          | •   |          | •                   |

## Precautions

### Safety

- Operate the TV only with 120 V AC.
- The plug is designed, for safety purposes, to fit in the wall outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- If any liquid or solid object should fall inside the cabinet, unplug the TV immediately and have it checked by qualified personnel before operating it further.

### Installing

- To prevent internal heat build-up, do not block the ventilation openings.
- Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.
- The AC power cord is attached to the rear of the TV with hooks. Do not attempt to remove the cord from these hooks. Doing so could cause damage to the TV.

## Using This Manual

This manual is divided into five major sections. We recommend that you review the contents before you begin to use your new TV.

### 1 Connecting and Installing the TV

This section guides you through your initial set up. It shows how to connect to your antenna or cable, and connect any accessories.

### 2 Basic Set Up

This section teaches you the basic skills needed to operate your new TV.

### 3 Using your New TV

This section shows the initial setup screen and how to use your remote control.

### 4 Using your Menus

This section teaches you how to access on-screen menus and adjust your TV's settings.

### 5 Troubleshooting

This section helps you to correct problems you may encounter with your TV.



### Making Connections

Refer to the table below, it will direct you to the diagram suitable to the equipment you will be connecting.



 
| If you will be connecting                      | See page |
|--|----------|
| Cable or antenna only                          | 3        |
| Cable and antenna                              | 3        |
| Cable box                                      | 4        |
| Cable box and cable to view scrambled channels | 4        |
| VCR and cable or antenna                       | 5        |
| VCR and cable box                              | 5        |
| Two VCRs for tape editing                      | 6        |
| Satellite Receiver                             | 7        |
| VCR and Satellite Receiver                     | 7        |
| DVD Player                                     | 8        |
| Audio system                                   | 9        |
| Camcorder to view tapes                        | 9        |
| VCR using S-Link                               | 10       |
| Satellite Receiver using S-Link                | 10       |



## Cable or Antenna Connections

### Connecting directly to cable or an antenna


The connection you choose will depend on the cable found in your home. Newer homes will be equipped with standard coaxial cable (see **A**); older homes will probably have 300-ohm twin lead cable (see **B**); still other homes may contain both (see **C**).

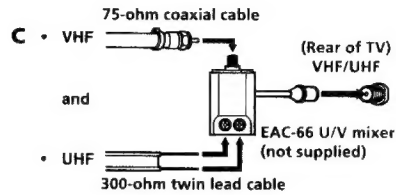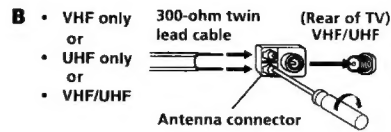

## Cable and antenna

### KV-32S66, 35S66 only

If your cable provider does not feature local channels, you may find this set up convenient

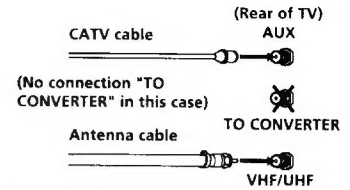

Select CABLE or antenna (ANT) mode by pressing ANT on the remote control.

### Note

In order to receive channels with an antenna, you will need to turn your CABLE to OFF and perform the AUTO PROGRAM function, (see page 23).


### Cable Box Connections

Some pay cable TV systems use scrambled or encoded signals that require a cable box to view all channels.

#### Cable box

- 1 Connect the coaxial connector from your cable to the IN on your cable box.
- 2 Using a coaxial cable, connect OUT on your cable box to VHF/UHF on your TV.

*If you will be controlling all channel selection through your cable box, you should consider using the CHANNEL FIX feature, (see page 23).*

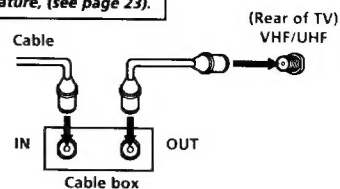

#### Cable box and cable

##### KV-32566, 35566 only

For this set up, you can switch between scrambled channels (through your cable box), and normal (CATV) channels by pressing ANT on your remote control.


#### Notes

- Your Sony remote control can be programmed to operate your cable box, (see page 30).
- When using PIP, you cannot view the AUX input in the window picture.

#### Tip

Pressing ANT switches between these inputs.

*If you are connecting a cable box through the AUX input and would like to switch between the AUX and normal (CATV) input you should consider using the CHANNEL FIX feature, (see page 23).*

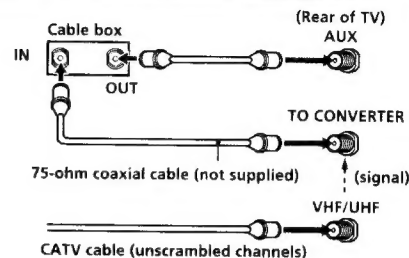

## VCR Connections

### Connecting an antenna/cable TV system with a VCR

- 1 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 2 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.



#### Tip

If you are connecting a monaural VCR, connect only the single white audio output to the left input on your TV.

### Connecting a VCR and TV with a cable box

- 1 Connect the coaxial cable from the wall to IN on your cable box.
- 2 Using a coaxial connector, connect OUT on your cable box to IN on your VCR.
- 3 Connect a coaxial cable (not supplied) from the OUT jack on your VCR to VHF/UHF on your TV.
- 4 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S VIDEO does not provide sound, your audio connectors must still be connected.

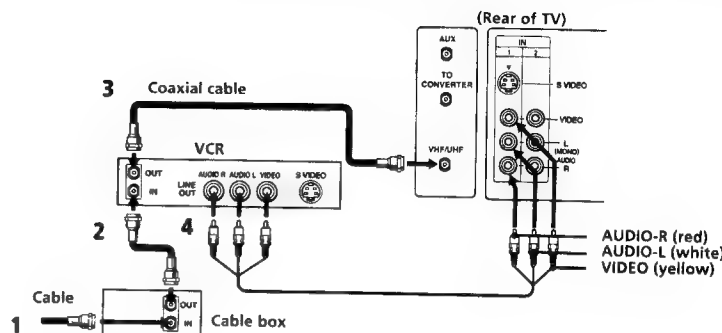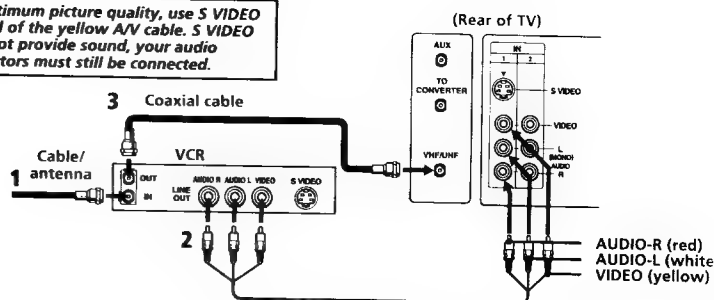

## Connecting and Installing the TV (continued)


### Connecting two VCRs for tape editing

**KV-32V42, 35V42 only**

MONITOR OUT gives you the ability to use a second VCR to record a program being played by the primary VCR or to perform tape editing and dubbing.

- 1 Connect the VCR intended for playback using the connection instructions on page 5 of this manual.
- 2 Using A/V connectors, connect AUDIO and VIDEO IN on your VCR intended for recording to MONITOR AUDIO and VIDEO OUT on your TV.

*To perform tape editing; set the TV to the video input intended for playback by pressing TV/VIDEO.*

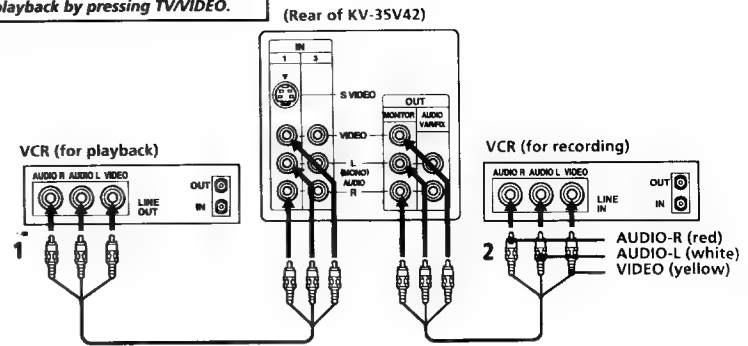


## Satellite Receiver Connections

### Connecting a satellite receiver

- 1 Connect the cable from your satellite antenna to SATELLITE IN on your receiver.
- 2 Attach the coaxial connector from your cable or antenna to VHF/UHF on your TV.
- 3 Using A/V connectors, connect AUDIO and VIDEO OUT on your receiver to AUDIO and VIDEO IN on your TV.


For optimum picture quality, use S VIDEO instead of the yellow A/V cable. S Video does not provide sound, your audio connectors must still be connected.

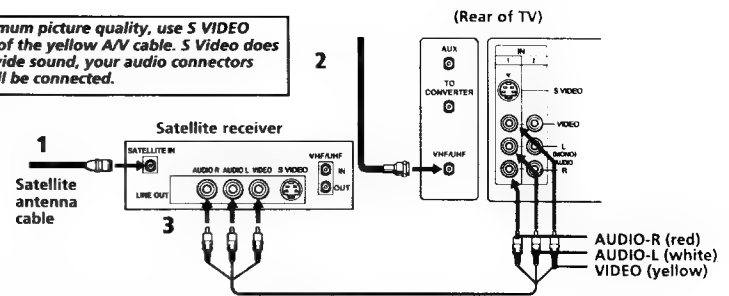

### Connecting a satellite receiver and a VCR

- 1 Connect the cable from your satellite antenna to SATELLITE IN on your receiver.
- 2 Attach the coaxial connector from your cable or antenna to IN on your VCR.
- 3 Using a coaxial connector, connect OUT on your VCR to VHF/UHF on your TV.
- 4 Using A/V connectors, connect AUDIO and VIDEO OUT on your receiver to AUDIO and VIDEO IN on your VCR.
- 5 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.

Pressing TV/VIDEO on the remote control will allow you to view from the satellite receiver or VCR.

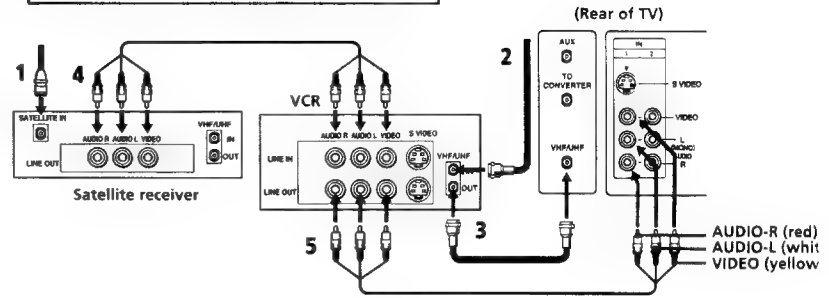


### DVD Player Connections

#### Connecting a DVD Player

- 1** Using audio connectors, connect AUDIO OUT on your DVD player to AUDIO IN on your TV.
- 2** Using an S VIDEO cable, connect S VIDEO on your DVD player to S VIDEO on your TV.

**Note**


If you do not have an S Video cable, connect a yellow video cable from LINE OUT VIDEO on your DVD to VIDEO IN on your TV.

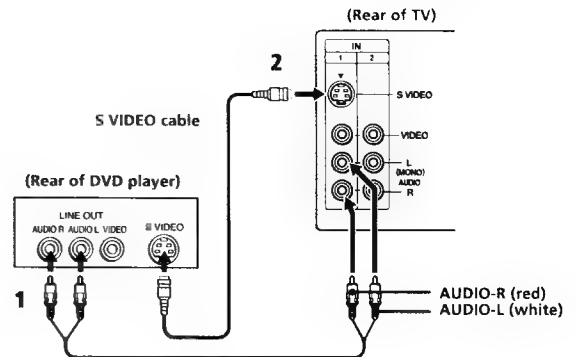


## Additional Connections

### Connecting an audio system

For an enhanced sound, connect your audio system to your TV.

- 1 Using AUDIO connectors, connect AUDIO OUT on your TV to one of the unused Line inputs (e.g. Tape-2, AUX1, etc.) on your stereo.
- 2 Set your stereo to the chosen Line input and use the AUDIO  menu to set your audio output, (see page 19).

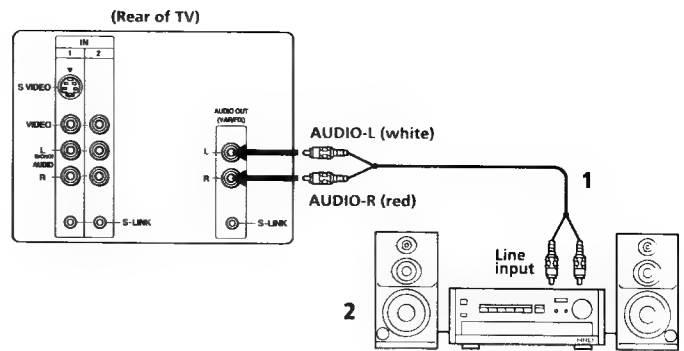

### Connecting a camcorder


This connection is convenient for viewing a picture directly from your camcorder.

Using A/V connectors, connect AUDIO and VIDEO OUT on your camcorder to AUDIO and VIDEO IN on your TV.

Connection can also be made directly to the A/V input located on the rear of the TV.

#### Tip

If you are connecting a monaural camcorder, connect only the single white audio output to the left input on your TV.

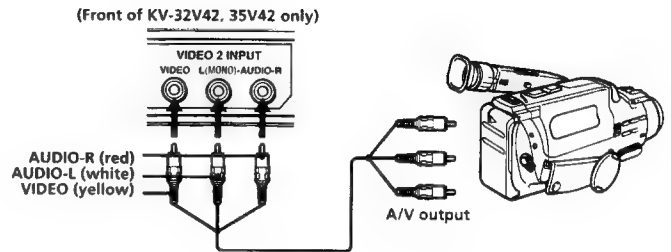


## Using Special Sony Features

KV-32S66, 35S66 only

### Connecting S-Link to a VCR

S-Link automatically powers on the TV and switches to the correct video input when a tape is inserted in the VCR.

- 1 Using A/V connectors, connect AUDIO and VIDEO OUT on your VCR to AUDIO and VIDEO IN on your TV.
- 2 Using an S-Link connector (mono mini plug), connect S-LINK on your VCR to S-LINK/CONTROL S-OUT in the same VIDEO IN column on your TV.

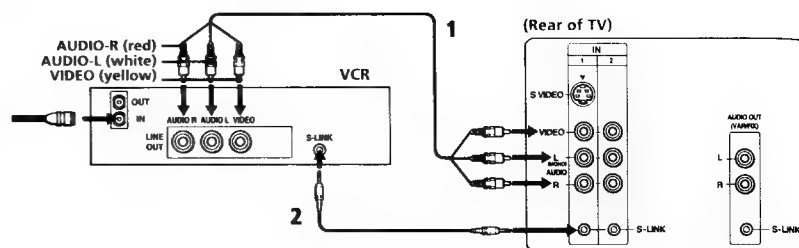

### Connecting S-Link to a satellite receiver


When you power on the satellite receiver, S-Link automatically powers on the TV and switches to the correct video input.

- 1 Using A/V connectors, connect AUDIO and VIDEO OUT on your satellite receiver to AUDIO and VIDEO IN on your TV.
- 2 Using an S-Link connector (mono mini plug), connect S-LINK on your satellite receiver to S-LINK/CONTROL S-OUT in the same VIDEO IN column on your TV.

#### Note

The S-Link feature will override the "SKIP" VIDEO LABEL input, (see page 21).


*The S-Link connector must be in the same VIDEO-IN column as the connected A/V cables.*

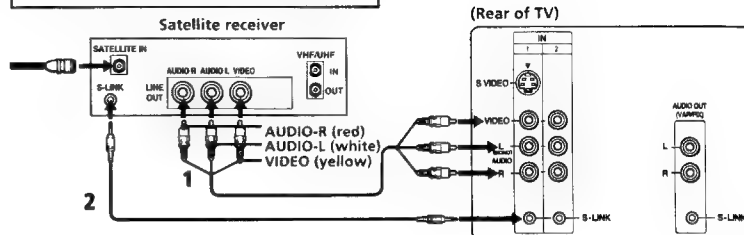



### Inserting batteries


Insert two size AA (R6) batteries (supplied) by matching the + and - on the batteries to the diagram inside the battery compartment.

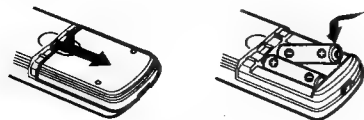

### Notes

- Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater, or where the humidity is high.
- Your remote control can be programmed to operate most video equipment, (see page 28).

### Using the remote control move & select buttons

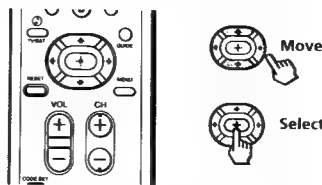


The supplied remote control has "arrow" buttons (↑, ↓, ←, →) which allow for movement of the on-screen (▶) cursor. Pressing on the outer buttons will cause the cursor to move in the corresponding direction. Pressing the center button (⊕) will select the item.

### Front panel menu control
 
#### U.S. models only

The front panel controls allow access to the on-screen menus without the use of a remote control.

Press the SET UP button on the TV, then press TV/VIDEO to access the menus. Follow the on-screen instructions to adjust your TV settings.



For KV-32V42, 35V42 the control buttons are located on the top of the TV.

## Setting up the TV automatically

After you have finished connecting your TV, you will want to run AUTO PROGRAM to set up your channels.

The AUTO PROGRAM feature does not apply for installations that use a cable box for all channel selection.

### Tips

- Perform this function during the day, with the antenna and/or cable properly connected, to ensure that all available channels will be broadcasting and receivable.
- If your cable or antenna is connected to AUX, press ANT until AUX appears next to the channel number.

Using the buttons on the front of the TV:



For KV-32V42, 35V42, the control buttons are located on the top of the TV.

- 1 Press POWER to turn on the TV. The initial setup screen appears.

(U.S. models only) (Canadian models only)

|                                    |                                    |
|------------------------------------|------------------------------------|
| ENGLISH: [CH +]                    | ENGLISH: [CH +]                    |
| ESPAÑOL: [CH -]                    | ESPAÑOL: [CH -]                    |
| AUTO SET UP: [VOL +]               | FRANÇAIS: [VOL +]                  |
| DEMO: [VOL -]                      | AUTO SET UP: [VOL -]               |
| MENU: [TV/VIDEO]                   | DEMO: [TV/VIDEO]                   |
| First please connect cable/antenna | First please connect cable/antenna |

- 2 Make your language selection, the menus will change to reflect your choice.
- 3 Follow the on-screen instructions to continue AUTO SET UP or for a DEMO of the menus.

### U.S. models only

- 4 Press TV/VIDEO to operate the on-screen menus without the use of a remote control. Follow the on-screen instructions to make adjustments to your TV settings.

## To perform AUTO SET UP again

Press the SET UP button on the TV.

### Tip

To reset your TV to factory settings, turn the TV on. Then, while pressing the RESET button on your remote control, press the POWER button on your TV. The TV will turn itself off, then back on.

 
 



 


## Watching the TV

The following chart explains more advanced buttons on your remote control.



REFER TO THE  
ILLUSTRATION OF THE  
REMOTE CONTROL ON THE  
INSIDE FRONT COVER OF  
THIS MANUAL AS YOU  
REVIEW THIS CHART


| Using the White Labeled Buttons for TV Operations |   |
|---|---|
|   | Press when you want to turn connected equipment on and off.   |
|   | Press when you want to control connected equipment with your remote control, (see pages 28-30 for instructions on programming your remote control).       |
|   | Use for direct channel selection. Press 0-9 to select a channel, the channel will change after 2 seconds, or you can press ENTER for immediate selection. |
|   | Cycles through the VIDEO MODE settings: VIVID, MOVIE, STANDARD.   |
|   | Alternates back and forth between the last two channels selected with the 0-9 keys.   |
|   | Instantly turns off the sound. Press again or press VOL + to restore sound.   |
|   | Turns the TV off in approximately 30, 60, or 90 minutes. Cancel by pressing until SLEEP OFF appears.  |
|   | Press to return to factory settings while in an on-screen menu.   |

| <b>Using the White Labeled Buttons for TV Operations</b>                          |  |
|---|--|
|  | Press once to display current time and CHANNEL CAPTION (if set) and channel number.<br>Press again to activate current CAPTION VISION setting.<br>To cancel, press <b>DISPLAY</b> until DISPLAY OFF appears. |
|  | Press repeatedly to cycle through available video inputs.  |
|  | Press to change the VHF/UHF input to the AUX input. (KV-32S66, 35S66 only)   |
|  | Press when you are finished using a VCR and you want to switch to the TV input. Your VCR power will remain on.   |
|  | Cycles through the Multi-channel TV Sound (MTS) options: STEREO, SAP (Second Audio Program), MONO (see page 19).   |
|  | Powers off all Sony equipment at once.<br><i>This feature may not work with older Sony equipment.</i>  |
|  | Cycles through the available audio settings.   |
|  | Brings up the custom guide of your satellite receiver. (Your remote control must be programmed to operate your satellite receiver, see page 30)  |

## Using Picture-in-Picture – PIP

### KV-32S66, 35S66 only

Picture-in-Picture (PIP) allows you to watch two channels simultaneously, one in the large main window and another in a small window picture.

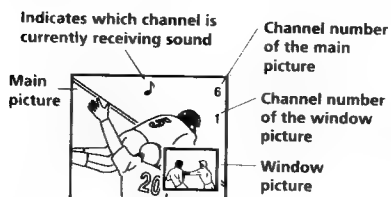

#### Notes

- You must press **TV (FUNCTION)** before you can control PIP with the yellow labeled buttons.
- The **AUX** input cannot be viewed in the window picture.



REFER TO THE ILLUSTRATION OF THE REMOTE CONTROL ON THE INSIDE FRONT COVER OF THIS MANUAL AS YOU REVIEW THIS CHART

### Use the Yellow Labeled Buttons for PIP Operations

|                        |   |
|------------------------|---|
| PIP<br>                | Displays the window picture. Press again to decrease the size. To cancel, press until the window picture turns off.             |
| TV/VIDEO<br>           | Cycles through available video inputs: TV, VIDEO 1, VIDEO 2   |
| AUDIO<br>              | Alternates sound between the main picture and the window picture. A ♪ will appear to indicate which picture is receiving sound. |
| TV/VTR<br>+<br>CH<br>- | Changes the channel in the window picture.  |
| POSITION<br>           | Moves the location of the window picture.   |
| FREEZE<br>             | Press to freeze the window picture. Press again to restore the picture.   |
| SWAP<br>               | Switches the position of the main picture with the window picture.  |

## Learning menu selection

Use the **MENU** button to access a menu and use the arrow buttons (◀ or ▶) to alter settings. Use the following example, in which we activate the **CABLE**, to learn how to modify settings.


- 1 Press the **MENU** button.  
The main menu appears.




- 2 Press ◀ or ▶ to highlight the desired menu (in this case **SET UP** [left arrow]), and press [right arrow] to select it.



- 3 Press ◀ or ▶ to move to the desired option and press [right arrow].

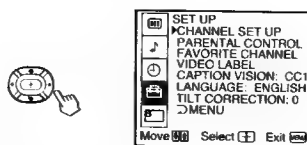


- 4 Press ◀ or ▶ to move to the desired feature and press [right arrow].

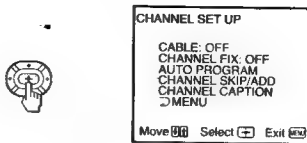

Options for your selection will be highlighted.

- 5 Press ◀ or ▶ to make your selection and press [right arrow].

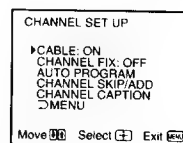

When you are finished making changes to the selected menu, choose >MENU to return to the main menu.




### Tip

Pressing **MENU** on the remote control will allow you to exit from the menus at any time.

## Quick start to the menus

The following is a guide to your menus.

### To select a menu:

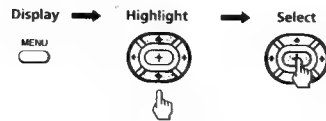


### Note

Menus shown are for KV-35S66, your menus may not look exactly like those illustrated.

|  |  |
|--|--|
| VIDEO<br>MODE: VIVID<br>PICTURE:<br>BRIGHTNESS:<br>COLOR:<br>HUE:<br>SHARPNESS:<br>MENU:  MENU<br>Move  Select  Exit   | <p>The VIDEO menu will allow you to make adjustments to your picture settings. It will also allow you to customize the picture MODE based on the type of program you are viewing.</p>  |
| AUDIO<br>TREBLE:<br>BASS:<br>BALANCE:<br>EFFECT: OFF<br>MTS: STEREO<br>SPEAKER: ON<br>AUDIO OUT: VARIABLE<br>MENU:  MENU<br>Move  Select  Exit   | <p>The AUDIO menu offers enhanced audio options such as listening to second audio programming (SAP), or customizing the EFFECT of the sound on your TV.</p>  |
| TIMER<br>DAYLIGHT SAVING: NO<br>CURRENT TIME SET<br>ON/OFF TIMER<br>MENU:  MENU<br>Move  Select  Exit  | <p>The TIMER menu sets the clock on your TV and allows you to program your TV for scheduled viewing using the ON/OFF TIMER.</p>  |
| SET UP<br>CHANNEL SET UP<br>PARENTAL CONTROL<br>FAVORITE CHANNEL<br>VIDEO LABEL<br>CAPTION VISION: CC1<br>LANGUAGE: ENGLISH<br>TILT CORRECTION: 0<br>MENU:  MENU<br>Move  Select  Exit | <p>The SET UP menu provides several options for setting up your channels, labeling your TV/VIDEO inputs, and selecting the LANGUAGE of your menus.</p>   |
| Escape to<br>Basic Menu<br>Move  Select  Exit  | <p>The Basic Menu provides quick access to frequently used settings.</p> <div data-bbox="1429 525 1591 777"> <p>CHANNEL SET UP</p> <p>▶CABLE ON<br/>CHANNEL FIX: OFF<br/>AUTO PROGRAM<br/>CHANNEL SKIP/ADD<br/>CHANNEL CAPTION<br/>▶MENU</p> <p>Move  Select  Exit </p> <p>#VIDEO MODE: VIVID<br/>PICTURE: <br/>AUDIO: OFF<br/>ADVANCED MENU</p> <p>Move  Select  Exit </p> </div> |

## Using the VIDEO menu

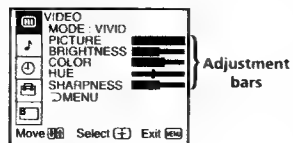


### To select the VIDEO menu:



|  |   |
|--|---|
| <b>MODE</b><br><i>Customized picture viewing</i> | <b>VIVID:</b> Select for enhanced picture contrast and sharpness.<br><b>MOVIE:</b> Select for a finely detailed picture.<br><b>STANDARD:</b> Select to receive a standard picture.<br><i>Press the <b>PICTURE MODE</b> button to access one of the above settings directly.</i> |
| <b>PICTURE</b><br><i>Picture contrast</i>        | Adjust left to decrease picture contrast and soften the color.<br>Adjust right to increase picture contrast and create more vivid color.  |
| <b>BRIGHTNESS</b><br><i>Picture adjustment</i>   | Adjust left to darken the picture.<br>Adjust right to brighten the picture.   |
| <b>COLOR</b><br><i>Color saturation</i>          | Adjust left to decrease color intensity or saturation.<br>Adjust right to increase color intensity or saturation.   |
| <b>HUE</b><br><i>Color tones</i>                 | Adjust left to increase the red tones.<br>Adjust right to decrease the red tones.   |
| <b>SHARPNESS</b><br><i>Picture detail</i>        | Adjust left to soften the picture detail.<br>Adjust right to sharpen the picture detail.  |



## Using the AUDIO 🎵 menu

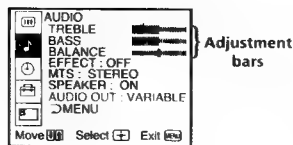

### To select the AUDIO 🎵 menu:




#### Tips 💡


- Press **⏮** to cycle through your AUDIO options.
- Press **MTS/SAP** on your remote control to cycle through the MTS options.

|  |  |
|--|--|
| <b>TREBLE</b>  | Adjust left or right to decrease or increase higher frequency sounds.  |
| <b>BASS</b>  | Adjust left or right to decrease or increase lower frequency sounds.   |
| <b>BALANCE</b>   | Adjust left or right to emphasize left and right speaker balance.  |
| <b>AUTO VOLUME</b><br><i>Stabilizes volume</i>                             | <b>KV-32V42, 35V42 only</b><br><b>ON:</b> Select to stabilize the volume.<br><b>OFF:</b> Select to turn AUTO VOLUME off.   |
| <b>EFFECT</b><br><i>Enhanced audio</i>                                     | <b>SURROUND:</b> Simulates theater quality sound for programs broadcast in stereo. (KV-32S42, 32S66, 35S42, 35S66).<br><b>SIMULATED:</b> Adds a stereo-like effect to mono programs. (KV-32V42, 35V42 only)<br><b>SRS:</b> Produces a dynamic three dimensional sound for stereo signals. (KV-32V42, 35V42 only)<br><b>OFF:</b> Normal stereo or mono reception. |
| <b>MTS</b><br><i>Multi-Channel sound</i>                                   | <b>MONO:</b> Select to reduce noise in areas with poor reception.<br><b>SAP:</b> Select to listen to bilingual broadcast or other Second Audio Programs (SAP).<br><b>STEREO:</b> Select when viewing a broadcast in stereo.  |
| <b>SPEAKER</b><br><i>Custom selection of audio output source</i>           | <b>ON:</b> Select to listen to the sound from the TV speakers with or without a separate stereo system.<br><b>OFF:</b> Select to turn off the TV speakers and listen to the TV's sound only through external audio system speakers.  |
| <b>AUDIO OUT</b><br><i>Use to control the TV's volume through a stereo</i> | AUDIO OUT can only be set when SPEAKER is set to OFF.<br><b>VARIABLE:</b> Adjust the volume through your TV.<br><b>FIXED:</b> Adjust the TV volume through a connected stereo.   |

## Using the TIMER ⌚ menu

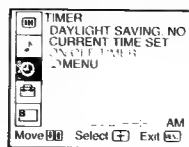

### To select the TIMER ⌚ menu:

 

Tip 💡

Set DAYLIGHT SAVING before setting the clock.

|   |  |  |
|---|--|--|
| <b>DAYLIGHT SAVING</b>  | <p><b>YES:</b> Select to compensate for Daylight Saving Time.<br/> <b>NO:</b> Select at the end of Daylight Saving Time.</p>   |  |
| <p><b>CURRENT TIME SET</b><br/> <i>Necessary for the ON/OFF TIMER</i></p> | <p>With the CURRENT TIME SET menu open:</p> <ol style="list-style-type: none"> <li>1 Press <b>ENTER</b>.</li> <li>2 Press <b>▲</b> or <b>▼</b> until the current day is displayed. Press <b>ENTER</b> to select.</li> <li>3 Press <b>▲</b> or <b>▼</b> until the current hour and AM/PM is displayed. Press <b>ENTER</b> to select.</li> <li>4 Press <b>▲</b> or <b>▼</b> until the current minute is displayed, and press <b>ENTER</b>.</li> </ol> <p><i>Any loss of power will cause these settings to be cleared.</i></p>   |  |
| <p><b>ON/OFF TIMER</b><br/> <i>Wake up or scheduled viewing</i></p>       | <p><i>CURRENT TIME SET must be programmed before you can use the ON/OFF TIMER.</i></p> <p>With the ON/OFF TIMER menu open:</p> <ol style="list-style-type: none"> <li>1 Press <b>ENTER</b>.</li> <li>2 Press <b>▲</b> or <b>▼</b> until the desired day or range of days is displayed. Press <b>ENTER</b> to select.</li> <li>3 Indicate the time that you want the TV to turn on (hour, then minutes) by pressing <b>▲</b> or <b>▼</b> and then <b>ENTER</b>.</li> <li>4 Set the time duration (maximum of 6 hours) by pressing <b>▲</b> or <b>▼</b> and then <b>ENTER</b>.</li> <li>5 Press <b>▲</b> or <b>▼</b> until you reach the desired channel. Press <b>ENTER</b> to select.</li> </ol> <p><i>When you perform AUTO PROGRAM, all ON/OFF TIMER settings will be cleared.</i></p> |  |

## Using the SET UP menu









 



### To select the SET UP menu:



#### Note

The FAVORITE CHANNEL feature is not available for the AUX input.


|  |  |
|--|--|
| <b>CHANNEL SET UP</b>  | The CHANNEL SET UP menu is a submenu which provides further options for setting up your TV. (see page 23)  |
| <b>PARENTAL CONTROL</b>  | The PARENTAL CONTROL feature provides parents several options for programming the TV to block shows based on their rating. (see pages 24-27).  |
| <b>FAVORITE CHANNEL</b><br>Quick access to favorite channels         | <p><b>AUTO:</b> Select to automatically program the last five channels accessed with the 0-9 buttons.</p> <p><b>MANUAL:</b> Select to program your channels manually.</p> <p><b>Using FAVORITE CHANNEL:</b></p> <ol style="list-style-type: none"> <li>1 Exit all menus and press , your FAVORITE CHANNEL options will appear.</li> <li>2 Press  or  to access the channel you want to watch, and press .</li> </ol> <p><b>For KV-32S66, 35S66 only</b><br/> If PREVIEW is set to ON, a window picture displays your favorite channels as you cycle through the options.</p> <div data-bbox="1462 262 1594 367"> </div> <div data-bbox="1462 388 1594 493"> </div>                       |
| <b>VIDEO LABEL</b><br>Label connected equipment for easy recognition | <p><b>With the VIDEO LABEL window open:</b></p> <ol style="list-style-type: none"> <li>1 Press  or  to access the input you want to label and press .</li> <li>2 Press  or  to choose the label and press .</li> </ol> <p><b>VIDEO LABEL Options:</b><br/> VHS, 8mm, BETA, LD, GAME, SAT, DVD, WEB, RECEIVER, DTV, SKIP</p> <p>If you select SKIP, your TV will skip this connection when you press the <b>TV/VIDEO</b> button. (Only available for VIDEO 2, VIDEO 3)</p> <div data-bbox="1462 556 1594 661"> </div> |



## Using Your Menus (continued)

|   |   |
|---|---|
| <b>CAPTION VISION</b><br><i>Closed Captioning and<br/>channel information</i> | <b>CC1, 2, 3 or 4:</b> Displays a printed version of the dialog or sound effects of a program, (the mode should be set to CC1 for most programs).<br><b>TEXT1, 2, 3 or 4:</b> Displays network/station information presented using either half or the whole screen.<br><b>XDS (Extended Data Service):</b> Displays network name, program name, program length, and time of the show if the broadcaster offers this service.<br><b>To activate CAPTION VISION</b><br>Press the <b>DISPLAY</b> button on the remote control, until your CAPTION VISION selection is displayed. |
| <b>LANGUAGE</b>   | Select from available languages to display all menus in your language of choice.  |
| <b>TILT CORRECTION</b>  | <b>For KV-35S42, 35S66, 35V42 only</b><br>Press <b>▲</b> or <b>▼</b> to correct any tilt of the picture between +5 and -5 and press <b>OK</b> .   |

## Using the CHANNEL SET UP menu

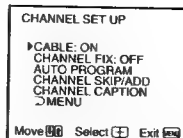

### To select the CHANNEL SET UP menu:



#### Note

Your remote control can be programmed to operate your cable box. (see page 30)

|   |  |
|---|--|
| <b>CABLE</b>  | <p><b>ON:</b> Select if you are receiving cable channels with a CATV cable.</p> <p><b>OFF:</b> Select if you are using an antenna.</p> <p>You will need to run <b>AUTO PROGRAM</b> after changing your <b>CABLE</b> settings.</p>  |
| <b>CHANNEL FIX</b><br><i>Useful when you have a cable box or satellite receiver connected</i> | <p><b>2-6:</b> Select when you want to control all channel selection through a cable box. Select the appropriate channel number (usually 3 or 4) and use the cable box's remote control for selection.</p> <p><b>AUX 2-6:</b> Select when a cable box is connected to the AUX input, (see page 4). Press the <b>ANT</b> button to alternate between inputs. (KV-32S66, 35S66 only)</p> <p><b>VIDEO 1:</b> Select from available video inputs when you have video equipment connected (e.g. satellite receiver) and you want your TV fixed to it.</p> |
| <b>AUTO PROGRAM</b>   | Instructs the TV to program all receivable channels.   |
| <b>CHANNEL SKIP/ADD</b>   | <p>With the <b>CHANNEL SKIP/ADD</b> window open:</p> <ol style="list-style-type: none"> <li>1 Select the desired channel.</li> <li>2 Press <b>SKIP</b> or <b>ADD</b> (only one option will be available).</li> </ol>   |
|   |  |
| <b>CHANNEL CAPTION</b><br><i>Label up to 12 channels with their call letters</i>              | <p>With the <b>CHANNEL CAPTION</b> menu open:</p> <ol style="list-style-type: none"> <li>1 Press <b>SKIP</b> or <b>ADD</b> and then <b>UP</b> or <b>DOWN</b> to access the desired channel, and press <b>SKIP</b> or <b>ADD</b> again.</li> <li>2 Press <b>UP</b> or <b>DOWN</b> to display the first letter or number of the caption and press <b>SKIP</b> or <b>ADD</b> to select it.</li> <li>3 Press <b>SKIP</b> or <b>ADD</b> to activate.</li> </ol>   |
|   |  |

## The Parental Guideline Rating System

This table provides a brief overview of the rating systems available for the PARENTAL CONTROL feature.

For detailed information on how to change your TV rating, see pages 26-27.

### Notes

- The content ratings will increase depending on the level of the age-based rating. For example, a program with a TV-PG V (Violence) rating may contain moderate violence, while a TV-14 V (Violence) rating may contain more intense violence.
- If you choose to block unrated TV programs, please be aware that the following programs may be blocked: emergency broadcasts, political programs, sports, news, public service announcements, religious programs and weather.

## Overview of the U.S. Ratings

### TV RATINGS

Block programs by their rating, content or both

#### Age based options:

**TV-Y:** All children.  
**TV-Y7:** Directed to older children.  
**TV-G:** General Audience.  
**TV-PG:** Parental Guidance suggested.  
**TV-14:** Parents Strongly cautioned.  
**TV-MA:** Mature Audience only.

#### Content based options:

**FV:** Fantasy Violence.  
**D:** Suggestive Dialogue.  
**L:** Strong Language.  
**S:** Sexual situations.  
**V:** Violence.

### TV RATINGS

►TV-Y: -  
 TV-Y7: - FV: -  
 TV-G: -  
 TV-PG: - D: L: S: V: -  
 TV-14: - D: L: S: V: -  
 TV-MA: - L: S: V: -  
 ►MENU

Select category  
 Move [00] Select [+] Exit [end]

### MOVIE RATINGS

(U.S. models only)  
**G:** All children and General Audience.  
**PG:** Parental Guidance suggested.  
**PG-13:** Parental Guidance for children under 13.  
**R:** Restricted viewing, Parental Guidance is suggested for children under 17.  
**NC-17:** No one 17 and under allowed.  
**X:** No one 17 and under allowed.

### MOVIE RATINGS

►G: -  
 PG: -  
 PG-13: -  
 R: -  
 NC-17: -  
 X: -  
 ►MENU

Select rating  
 Move [00] Select [+] Exit [end]

### UNRATED

Block programs or movies that are broadcast without a rating

(U.S. models only)  
**VIEW ALL:** Allows all unrated programming.  
**BLOCK TV:** Blocks all unrated TV programs.  
**BLOCK MOVIES:** Blocks all unrated movies.  
**BLOCK ALL:** Blocks all unrated programming.

### CUSTOM RATINGS

TV RATINGS  
 MOVIE RATINGS  
 ►UNRATED: VIEW ALL  
 ►MENU

Select category  
 Move [00] Select [+] Exit [end]

| Overview of the Canadian Ratings   |  |   |
|--|--|---|
| <b>ENGLISH RATINGS</b><br><i>For Canadian programs that are broadcast in English</i> | (Canadian models only)<br><b>C:</b> All children.<br><b>C8+:</b> Children 8 years and older.<br><b>G:</b> General programming.<br><b>PG:</b> Parental Guidance.<br><b>14+:</b> Viewers 14 and older.<br><b>18+:</b> Adult programming.   | <div>ENGLISH RATINGS</div> <div>           PC: -<br/>           C8+: -<br/>           G: -<br/>           PG: -<br/>           14+: -<br/>           18+: -<br/>           MENU         </div> <div>Select rating</div> <div>Move [Left Arrow] Select [Right Arrow] Exit [Exit Arrow]</div> |
| <b>FRENCH RATINGS</b><br><i>For Canadian programs that are broadcast in French</i>   | (Canadian models only)<br><b>G:</b> General programming.<br><b>8 ans+:</b> Not recommended for young children.<br><b>13 ans+:</b> Not recommended for ages under 13.<br><b>16 ans+:</b> Not recommended for ages under 16<br><b>18 ans+:</b> Programming restricted to adults. | <div>FRENCH RATINGS</div> <div>           PG: -<br/>           8 ans+: -<br/>           13 ans+: -<br/>           16 ans+: -<br/>           18 ans+: -<br/>           MENU         </div> <div>Select rating</div> <div>Move [Left Arrow] Select [Right Arrow] Exit [Exit Arrow]</div>      |
| <b>U.S.A. RATINGS</b><br><i>For programs from the United States</i>                  | (Canadian models only)<br>Please see TV RATINGS on page 24 for information on U.S.A. RATINGS.  |   |

## Using the PARENTAL CONTROL menu

This section shows you how to access the PARENTAL CONTROL menu. After you follow the example below, the next section shows you how to adjust your TV's rating.

- 1 Press **MENU** and select the **SET UP** menu.




- 2 Point the cursor to **PARENTAL CONTROL** and press **ENTER**.




You will be asked to enter a 4-digit password for any future access into the PARENTAL CONTROL menu.

- 3 Press **ENTER** and use the **0-9** buttons to enter your 4-digit password.

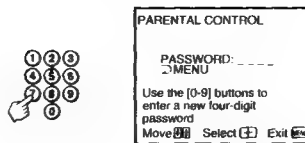


- 4 Confirm your password by entering it again.

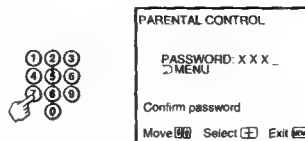

Once your password is set correctly, you will be taken into the PARENTAL CONTROL menu.

In order to change the **RATING** you will need to set **PARENTAL LOCK** to **ON**.

- 5 Point the cursor at **PARENTAL LOCK** and press **ENTER**. Press **UP** or **DOWN** to **ON** and press **ENTER**.

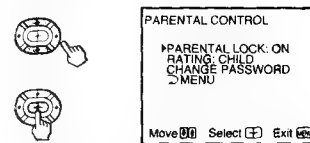

See pages 24-25 for an overview of the Parental Guideline ratings.


### Tip

Keep this instruction manual in a safe place. In the event that you forget your password, please see page 32.



## Setting the TV's RATING

This section provides information on how to set the TV's RATING and how to change your password.

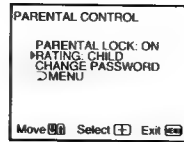

### Notes

- Entering your password to view a blocked program will temporarily turn PARENTAL LOCK to OFF.
- To reactivate your PARENTAL CONTROL settings, turn the TV off then back on; the TV will restore your rating settings.

|   |  |
|---|--|
| <b>PARENTAL LOCK</b><br><i>Turns ratings on/off</i> | <b>ON:</b> Select to activate the RATING.<br><b>OFF:</b> Turns off current ratings.  |
| <b>RATING</b>                                       | <p>If you are not familiar with the Parental Guideline rating system, you should use one of the following preselected categories to help simplify the rating selection. <b>The following maximum ratings will be allowed:</b></p> <p><b>CHILD:</b> TV-Y, TV-G, G (U.S. models only), TV-Y, TV-G, G, C (Canadian models only).</p> <p><b>YOUTH:</b> TV-PG, PG (U.S. models only), TV-PG, PG, 8 ans+ (Canadian models only).</p> <p><b>YOUNG ADULT:</b> TV-14, PG-13 (U.S. models only), TV-14, 14+, 13 ans+ (Canadian models only).</p> <p><b>CUSTOM:</b> If you prefer to set more restrictive ratings, highlight CUSTOM and press <b>ENTER</b>. See pages 25-26, for an overview of the rating systems available.</p> <p><b>In the CUSTOM RATINGS menu:</b></p> <ol style="list-style-type: none"> <li>1 Select the desired rating category and press <b>ENTER</b>.</li> <li>2 Press <b>▲</b> or <b>▼</b> to select the maximum rating or content and press <b>ENTER</b>.</li> <li>3 Press <b>▲</b> or <b>▼</b> to block or unblock the rating or content and press <b>ENTER</b>.</li> </ol> <p>Once you have blocked a rating or content, all higher ratings or contents will be automatically blocked.</p> <p><b>To view a blocked program:</b><br/>           Press <b>ENTER</b> on the remote control, then use the 0-9 buttons to enter your password.</p> |
| <b>CHANGE PASSWORD</b>                              | <p><b>To reset your password:</b></p> <ol style="list-style-type: none"> <li>1 Move the cursor to CHANGE PASSWORD press <b>ENTER</b>.</li> <li>2 Use the 0-9 buttons to create a new password, enter again to confirm.</li> </ol> <p><i>In the event that you forget your password, see page 32.</i></p>   |



## Programming the remote

You can use the supplied remote control to operate Sony or non-Sony video equipment.

- 1 Press **CODE SET**.
- 2 Press **VTR/DVD (FUNCTION)**.
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart.
- 4 Press **ENTER**.

### VCR code numbers

| Manufacturer      | Code                         |
|-------------------|------------------------------|
| Sony              | 301, 302, 303                |
| Admiral (M. Ward) | 327                          |
| Aiwa              | 338, 344                     |
| Audio Dynamic     | 314, 337                     |
| Broksonic         | 319, 317                     |
| Canon             | 309, 308                     |
| Citizen           | 332                          |
| Craig             | 302, 332                     |
| Criterion         | 315                          |
| Curtis Mathes     | 304, 338, 309                |
| Daewoo            | 341, 312, 309                |
| DBX               | 314, 336, 337                |
| Dimensia          | 304                          |
| Emerson           | 319, 320, 316, 317, 318, 341 |
| Fisher            | 330, 335                     |
| Funai             | 338                          |
| General Electric  | 329, 304, 309                |
| Go Video          | 322, 339, 340                |
| Goldstar          | 332                          |

28

|                          |   |
|--------------------------|---|
| Hitachi                  | 306, 304, 305, 338                          |
| Instant Replay           | 309, 308                                    |
| JC Penney                | 309, 305, 304, 330, 314, 336, 337           |
| JVC                      | 314, 336, 337, 345, 346, 347                |
| Kenwood                  | 314, 336, 332, 337                          |
| LXI (Sears)              | 332, 305, 330, 335, 338                     |
| Magnavox                 | 308, 309, 310                               |
| Marantz                  | 314, 336, 337                               |
| Marta                    | 332   |
| Memorex                  | 309, 335                                    |
| Minolta                  | 305, 304                                    |
| Mitsubishi/MGA           | 323, 324, 325, 326                          |
| Multitech                | 325, 338, 321                               |
| NEC                      | 314, 336, 337                               |
| Olympic                  | 309, 308                                    |
| Optimus                  | 327   |
| Panasonic                | 308, 309, 306, 307                          |
| Pentax                   | 305, 304                                    |
| Philco                   | 308, 309                                    |
| Philips                  | 308, 309, 310                               |
| Pioneer                  | 308   |
| Quasar                   | 308, 309, 306                               |
| RCA/PROSCAN              | 304, 305, 308, 309, 311, 312, 313, 310, 329 |
| Realistic                | 309, 330, 328, 335, 324, 338                |
| Sansui                   | 314   |
| Samsung                  | 322, 313, 321                               |
| Sanyo                    | 330, 335                                    |
| Scott                    | 312, 313, 321, 335, 323, 324, 325, 326      |
| Sharp                    | 327, 328                                    |
| Shintom                  | 315   |
| Signature 2000 (M. Ward) | 338, 327                                    |
| SV2000                   | 338   |
| Sylvania                 | 308, 309, 338, 310                          |
| Symphonic                | 338   |
| Tashiro                  | 332   |
| Tatung                   | 314, 336, 337                               |

|          |                         |
|----------|-------------------------|
| Teac     | 314, 336, 338, 337      |
| Technics | 309, 308                |
| Toshiba  | 312, 311                |
| Wards    | 327, 328, 335, 331, 332 |
| Yamaha   | 314, 330, 336, 337      |
| Zenith   | 331                     |

### Operating a VCR Buttons on the remote control

|                              |   |
|------------------------------|---|
| To turn on or off            | Press <b>VTR/DVD (POWER)</b> .  |
| To select a channel directly | Press the <b>0-9</b> buttons.   |
| To change channels           | Press <b>CH +/-</b> .   |
| To record                    | Press <b>▶</b> and <b>●</b> simultaneously.   |
| To play                      | Press <b>▶</b> .  |
| To stop                      | Press <b>■</b> .  |
| To fast forward              | Press <b>▶▶</b> .   |
| To rewind the tape           | Press <b>◀◀</b> .   |
| To pause                     | Press <b>II</b> .<br>To resume normal playback, press again or press <b>▶</b> .                 |
| To scan                      | Press <b>▶▶</b> or <b>◀◀</b> during playback.<br>To resume normal playback, release the button. |
| To change input mode         | Press <b>TV/VTR</b> .   |

### Tips

- In some rare cases, you may not be able to operate your non-Sony video equipment with the supplied remote control. In this case, please use the equipment's own remote control.
- When you remove the batteries, the code number may revert to the factory setting.
- The code numbers for Sony VCRs are assigned at the factory as follows:

|                           |   |
|---------------------------|---|
| <b>VHS VCR</b>            | <b>301</b>                                    |
|                           | (preset code for the supplied remote control) |
| <b>8 mm VCR</b>           | <b>302</b>                                    |
| <b>Beta, ED Beta VCRs</b> | <b>303</b>                                    |

### Laserdisc code numbers

| Manufacturer | Code     |
|--------------|----------|
| Sony         | 701      |
| Panasonic    | 704, 710 |
| Pioneer      | 702      |

| Operating a Laserdisc                     | Buttons on the remote control  |
|---|--|
| To turn on or off                         | Press <b>VTR/DVD (POWER)</b> .   |
| To play                                   | Press <b>▶</b> .   |
| To stop                                   | Press <b>■</b> .   |
| To pause                                  | Press <b>II</b> .<br>To resume normal playback, press again or press <b>▶</b> .              |
| To scan                                   | Press <b>▶▶</b> or <b>◀◀</b> during playback.<br>To resume normal playback, press <b>▶</b> . |
| To search the chapter forward or backward | Press <b>CH +/-</b> .  |

### Tip

If you will not be programming a satellite receiver or cable box into the SAT/CABLE function of your remote, you can use it to program other video equipment (e.g. DVD, MDP, or second VCR).

### DVD (Digital Versatile Disc) code numbers

| Manufacturer | Code |
|--------------|------|
| Sony         | 751  |
| Panasonic    | 753  |
| Pioneer      | 752  |
| RCA          | 755  |
| Toshiba      | 754  |

| Operating a DVD player                    | Buttons on the remote control  |
|---|--|
| To turn on or off                         | Press <b>VTR/DVD (POWER)</b> .   |
| To play                                   | Press <b>▶</b> .   |
| To stop                                   | Press <b>■</b> .   |
| To pause                                  | Press <b>II</b> .<br>To resume normal playback, press again or press <b>▶</b> .              |
| To scan                                   | Press <b>▶▶</b> or <b>◀◀</b> during playback.<br>To resume normal playback, press <b>▶</b> . |
| To search the chapter forward or backward | Press <b>CH +/-</b> .  |
| To select chapters directly               | <b>0-9 + ENTER</b> .   |
| <b>MENU</b>                               | Press to display DVD menu.   |
| To move cursor in menu                    | Use your arrow buttons <b>▲, ◀, ▶, ▼</b> .   |

## Operating a Cable Box or Satellite Receiver

### Programming the remote control

You can program the supplied remote control to operate a cable box or satellite receiver.

- 1 Press CODE SET.
- 2 Press SAT/CABLE (FUNCTION).
- 3 Use the 0-9 buttons to key in the manufacturer's code number from the following chart.
- 4 Press ENTER.

### For more details on operating the cable box or satellite receiver

Refer to the operating instructions that were supplied with the equipment.

### If the remote control doesn't work

First, try repeating the setup procedures using the other codes listed for your equipment.

#### Tips

- If more than one code number is listed, try entering them one by one until you come to the correct code for your equipment.
- If you enter a new code number, the code number you previously entered at that setting is erased.
- In some rare cases, you may not be able to operate your equipment with the supplied remote control. In this case, use the equipment's supplied remote control.
- Whenever you remove the batteries, the code numbers may revert to the factory setting.

### Cable box code numbers

| Manufacturer       | Code  |
|--------------------|---|
| Hamlin/Regal       | 222, 223, 224, 225, 226                     |
| Jerrold/G. I.      | 201, 202, 203, 204, 205, 206, 207, 208, 218 |
| Oak                | 227, 228, 229                               |
| Panasonic          | 219, 220, 221                               |
| Pioneer            | 214, 215                                    |
| Scientific Atlanta | 209, 210, 211                               |
| Tocom              | 216, 217                                    |
| Zenith             | 212, 213                                    |

### Satellite receiver code numbers

| Manufacturer     | Code                                 |
|------------------|--------------------------------------|
| Sony             | 801 (preset code for remote control) |
| General Electric | 802                                  |
| Hitachi          | 805                                  |
| Hughes           | 804                                  |
| Panasonic        | 803                                  |
| RCA/PROSCAN      | 802, 808                             |
| Toshiba          | 806, 807                             |

## Troubleshooting

Consult the table below; it suggests solutions to specific problems.

|  |   |  |
|--|---|--|
| You want to restore the TV's factory settings                    |   | <ul style="list-style-type: none"> <li>First, turn the TV on. Then while pressing the <b>RESET</b> button on the remote control, press the <b>POWER</b> button on the TV. The TV will turn itself off and then back on. When the TV turns on again, all settings will be reset, and the initial setup screen will appear.</li> </ul> |
| A red light keeps flashing on the TV for more than a few seconds | <ul style="list-style-type: none"> <li>Your TV may need service.</li> </ul>   | <ul style="list-style-type: none"> <li>Call your local Sony service center.</li> </ul>   |
| TV makes a noise when turned on                                  | <ul style="list-style-type: none"> <li>This is a normal function of your TV.</li> </ul>   |  |
| Screen is not lit and there is no sound                          | <ul style="list-style-type: none"> <li>Power cord may not be plugged in.</li> <li>Remote control batteries may not be inserted correctly.</li> <li>TV/VIDEO setting may be incorrect.</li> <li>Current program may exceed PARENTAL CONTROL settings.</li> </ul> | <ul style="list-style-type: none"> <li>Check your power cord.</li> <li>Re-insert the batteries in your remote control.</li> <li>Press <b>TV/VIDEO</b> until you receive a channel.</li> <li>Check your PARENTAL CONTROL settings, (page 27).</li> </ul>  |
| Poor or no picture (screen lit), good sound                      | <ul style="list-style-type: none"> <li>VIDEO menu settings may not be adjusted correctly.</li> <li>Antenna/cable connections may be faulty.</li> <li>VIDEO LABEL inputs may be set to WEB. (This label darkens the screen for ideal WebTV viewing)</li> </ul>   | <ul style="list-style-type: none"> <li>Readjust your VIDEO menu settings, (page 18).</li> <li>Check your VIDEO LABEL settings, (page 21).</li> </ul>   |
| Good picture, no sound   | <ul style="list-style-type: none"> <li>Sound may be set to MUTE.</li> <li>Your TV may be set to SAP.</li> <li>SPEAKER may not be set correctly.</li> </ul>  | <ul style="list-style-type: none"> <li>Press <b>MUTE</b>.</li> <li>Check the MTS setting in the AUDIO menu, (page 19).</li> <li>Check your SPEAKER settings, (page 19).</li> </ul>   |
| No color   | <ul style="list-style-type: none"> <li>Color settings may not be adjusted correctly.</li> </ul>   | <ul style="list-style-type: none"> <li>Adjust the COLOR settings in the VIDEO menu, (page 18).</li> </ul>  |
| Only snow and noise appear on the screen                         | <ul style="list-style-type: none"> <li>CABLE may not be set correctly in the CHANNEL SET UP menu.</li> <li>Antenna/cable connections may not be correct.</li> <li>TV may be set to AUX mode.</li> </ul>   | <ul style="list-style-type: none"> <li>Ensure that you have selected the correct CABLE mode in the CHANNEL SET UP menu, (page 23).</li> <li>Press <b>ANT</b> on your remote control to change the input mode, (page 14).</li> </ul>  |

|   |  |   |
|---|--|---|
| Cannot receive upper channels (UHF) when using an antenna | <ul style="list-style-type: none"> <li>CABLE setting may not be correct in the CHANNEL SET UP menu.</li> </ul> | <ul style="list-style-type: none"> <li>Ensure that CABLE is set to OFF in the CHANNEL SET UP menu, (page 23).</li> <li>Use AUTO PROGRAM to add receivable channels that are not presently in TV memory, (page 23).</li> </ul> |
| Cannot receive any channels when using cable              | <ul style="list-style-type: none"> <li>CABLE setting may not be correct in the CHANNEL SET UP menu.</li> </ul> | <ul style="list-style-type: none"> <li>Ensure that CABLE is set to ON in the CHANNEL SET UP menu, (page 23).</li> <li>Use AUTO PROGRAM to add receivable channels that are not presently in TV memory, (page 23).</li> </ul>  |
| Cannot gain enough volume when using a cable box          | <ul style="list-style-type: none"> <li>Volume may not be adjusted on your cable box.</li> </ul>                | <ul style="list-style-type: none"> <li>Use the remote control supplied with the cable box.</li> </ul>   |
| TV is fixed to one channel                                | <ul style="list-style-type: none"> <li>CHANNEL FIX settings may not be correct.</li> </ul>                     | <ul style="list-style-type: none"> <li>Check your CHANNEL FIX settings, (page 23).</li> </ul>   |
| Lost password for PARENTAL CONTROL                        |  | <ul style="list-style-type: none"> <li>In the password screen, enter the following master password: 4357. The master password cannot be used to unlock currently blocked channels.</li> </ul>                                 |

If, after reading these operating instructions, you have additional questions related to the use of your Sony television, please call our Direct Response Center at 1-800-222-SONY (7669)(U.S. residents only) or (416) 499-SONY (7669)(Canadian residents only).

## Supplied accessories

Remote control RM-Y168 (KV-32S42, 32V42, 35S42, 35V42 only), (1)  
 RM-Y169 (KV-32S66, 35S66 only)(1)  
 Batteries size AA (R6) (2)

## Optional accessories

Connecting cables  
 A/V Cable VMC-810/820/830HG  
 Audio Cable RKC-515HG  
 S-Link Cable RK-G69HG  
 S Video Cable YC-15/30HG

TV Stand SU-32A4, SU-35A4

|                                 | KV - 32S42                | KV - 32S66                | KV - 32V42                  | KV - 35S42              | KV - 35S66              | KV - 35V42                  |
|---------------------------------|---------------------------|---------------------------|-----------------------------|-------------------------|-------------------------|-----------------------------|
| <b>Power requirements</b>       | 120 V, 60 Hz              | 120 V, 60 Hz              | 120 V, 60 Hz                | 120 V, 60 Hz            | 120 V, 60 Hz            | 120 V, 60 Hz                |
| <b>Number of inputs/outputs</b> |                           |                           |                             |                         |                         |                             |
| Video <sup>1)</sup>             | 1                         | 2                         | 3                           | 2                       | 2                       | 3                           |
| S VIDEO <sup>2)</sup>           | 1                         | 1                         | 1                           | 1                       | 1                       | 1                           |
| Audio <sup>3)</sup>             | 1                         | 2                         | 3                           | 2                       | 2                       | 3                           |
| Audio out <sup>4)</sup>         | 1                         | 1                         | 1                           | 1                       | 1                       | 1                           |
| Monitor out <sup>1)</sup>       | —                         | —                         | 1                           | —                       | —                       | 1                           |
| S-Link                          | —                         | 3                         | —                           | —                       | 3                       | —                           |
| <b>Speaker output (W)</b>       | 5W x 2                    | 5W x 2                    | 5W x 2                      | 5W x 2                  | 5W x 2                  | 5W x 2                      |
| <b>Power consumption (W)</b>    |                           |                           |                             |                         |                         |                             |
| In use (Max.)                   | 180 W                     | 180 W                     | 180 W                       | 210 W                   | 210 W                   | 210 W                       |
| In standby                      | 2 W                       | 2 W                       | 2 W                         | 2 W                     | 2 W                     | 2 W                         |
| <b>Dimensions (W/H/D)</b>       |                           |                           |                             |                         |                         |                             |
| (mm)                            | 791 x 707 x 604.5 mm      | 791 x 707 x 604.5 mm      | 821 x 675.3 x 587 mm        | 870 x 761 x 653 mm      | 870 x 761 x 653 mm      | 920 x 730.8 x 641.8 mm      |
| (in.)                           | 31 x 27 13/16 x 23 3/4 in | 31 x 27 13/16 x 23 3/4 in | 32 3/8 x 26 5/8 x 23 1/8 in | 34 1/4 x 30 x 25 5/8 in | 34 1/4 x 30 x 25 5/8 in | 36 3/4 x 28 3/4 x 25 1/4 in |
| <b>Mass (kg)</b>                | 65 kg                     | 65 kg                     | 70 kg                       | 83 kg                   | 83 kg                   | 90 kg                       |
| (lb)                            | 143 lbs                   | 143 lbs                   | 154 lbs                     | 183 lbs                 | 183 lbs                 | 203 lbs                     |

#### Notes

- <sup>1)</sup> 1 Vp-p, 75 ohms unbalanced, sync negative  
<sup>2)</sup> Y: 1 Vp-p, 75 ohms unbalanced, sync negative  
C: 0.286 Vp-p (Burst signal), 75 ohms  
<sup>3)</sup> 500 mVrms Impedance: 47 kilohms  
<sup>4)</sup> More than 408 mVrms at the maximum volume setting (variable)  
More than 408 mVrms (fix)  
Impedance (Output): 2 kilohms

*Design and specifications are subject to change without notice.*

#### Television system

American TV standard, NTSC

#### Channel coverage

VHF: 2-13/UHF: 14-69/CATV: 1-125

#### Picture tube

Trinitron® tube

#### Visible screen size

32-inch picture measured diagonally (KV-32S42, 32S66, 32V42 only)

35-inch picture measured diagonally (KV-35S42, 35S66, 35V42 only)

#### Actual screen size

34-inch picture measured diagonally (KV-32S42, 32S66, 32V42 only)

37-inch picture measured diagonally (KV-35S42, 35S66, 35V42 only)

#### Antenna



 
75 ohm external terminal for VHF/UHF

#### (●)® SRS (SOUND RETRIEVAL SYSTEM)




The (●) SRS (SOUND RETRIEVAL SYSTEM) is manufactured by Sony Corporation under license from SRS Labs, Inc. It is covered by U.S. Patent No. 4,748,669. Other U.S. and foreign patents pending.

The word 'SRS' and the SRS symbol (●) are registered trademarks of SRS Labs, Inc.

Licensed by BBE Sound, Inc. under USP 4638258.4482866. BBE and BBE symbol are trademarks of BBE Sound, Inc.

|   |            |                                  |        |
|---|------------|----------------------------------|--------|
| <b>A</b>  |            |                                  |        |
| Adjusting your menus .....  | 16         | CHANNEL SET UP MENU .....        | 23     |
| ANT .....   | 14         | AUTO PROGRAM .....               | 23     |
| Antenna cable .....   | 3          | CABLE .....                      | 23     |
| Antenna connector .....   | 3          | CHANNEL CAPTION .....            | 23     |
| AUDIO  button .....    | 14, 15, 19 | CHANNEL FIX .....                | 23     |
| AUDIO menu operations  |            | CHANNEL SKIP/ADD .....           | 23     |
| AUDIO OUT .....   | 19         | COLOR .....                      | 18     |
| BALANCE .....   | 19         | Connecting TV to .....           | 3      |
| BASS .....  | 19         | Antenna .....                    | 3      |
| EFFECT .....  | 19         | Audio system .....               | 9      |
| MTS .....   | 19         | Cable .....                      | 3      |
| SPEAKER .....   | 19         | Cable box and cable .....        | 4      |
| TREBLE .....  | 19         | Camcorder .....                  | 9      |
| AUDIO OUT .....   |            | CONTROL S .....                  | 10     |
| FIXED .....   | 19         | DVD player .....                 | 8      |
| VARIABLE .....  | 19         | Satellite receiver .....         | 7      |
| AUTO PROGRAM .....  | 23         | Satellite receiver and VCR ..... | 7      |
| AUTO VOLUME CONTROL .....   | 19         | Two VCRs .....                   | 6      |
| AUX Hookup .....  | 3, 4       | VCR .....                        | 5      |
| <b>B</b>  |            | CURRENT TIME SET .....           | 20     |
| BALANCE .....   | 19         | <b>D</b>                         |        |
| BASIC menu operations  | 17         | DAYLIGHT SAVING .....            | 20     |
| BASS .....  | 19         | DEMO .....                       | 12     |
| Battery installation .....  | 11         | DISPLAY button .....             |        |
| BRIGHTNESS .....  | 18         | CAPTION VISION .....             | 22     |
| <b>C</b>  |            | XDS .....                        | 22     |
| CABLE .....   | 23         | DVD operation .....              | 29     |
| Cable box .....   | 4          | <b>E</b>                         |        |
| operation .....   | 30         | Editing using MONITOR OUT .....  | 6      |
| CAPTION VISION (closed caption) .....   | 22         | <b>EFFECT</b>                    |        |
| CH +/- .....  | 15         | OFF .....                        | 19     |
| CHANNEL CAPTION .....   | 23         | SIMULATED .....                  | 19     |
| CHANNEL FIX .....   | 23         | SRS .....                        | 19     |
|   |            | SURROUND .....                   | 19     |
| <b>34</b>   |            | <b>F</b>                         |        |
|   |            | FAVORITE CHANNEL .....           | 21     |
|   |            | FAVORITE CHANNEL w/preview ..... | 21     |
|   |            | FREEZE button .....              | 15     |
|   |            | <b>H</b>                         |        |
|   |            | HUE .....                        | 18     |
|   |            | <b>I, J, K</b>                   |        |
|   |            | JUMP button .....                | 13     |
|   |            | <b>L</b>                         |        |
|   |            | LANGUAGE .....                   | 22     |
|   |            | Language selection .....         | 12, 22 |
|   |            | Laserdisc .....                  | 29     |
|   |            | <b>M</b>                         |        |
|   |            | Menu selection .....             | 16     |
|   |            | MODE                             |        |
|   |            | MOVIE .....                      | 18     |
|   |            | STANDARD .....                   | 18     |
|   |            | VIVID .....                      | 18     |
|   |            | MONITOR OUT .....                | 6      |
|   |            | MTS                              |        |
|   |            | MONO .....                       | 19     |
|   |            | SAP .....                        | 19     |
|   |            | STEREO .....                     | 19     |
|   |            | MUTING button .....              | 13     |
|   |            | <b>O</b>                         |        |
|   |            | ON/OFF TIMER .....               | 20     |
|   |            | Operating video equipment .....  | 28     |

 

|                          |                    |  |        |   |    |
|--------------------------|--------------------|--|--------|---|----|
| <b>P, Q</b>              |                    | <b>S</b>   |        | <b>V, W, X</b>  |    |
| PARENTAL CONTROL         |                    | SAP  | 19     | VCR   | 5  |
| PARENTAL LOCK            | 27                 | Safety   | 1      | VCR codes   | 28 |
| RATING                   | 27                 | Select buttons   | 11     | VCR operation   | 28 |
| CHANGE PASSWORD          | 27                 | Adjustment bars  | 11     | VIDEO LABEL   | 21 |
| Picture-in-Picture (PIP) |                    | SET UP menu             | 21     | VIDEO menu operations  |    |
| Main picture             | 15                 | CAPTION VISION   | 22     | BRIGHTNESS  | 18 |
| Window picture           | 15                 | CHANNEL SETUP  | 21     | COLOR   | 18 |
| PICTURE MODE, button     | 13                 | FAVORITE CHANNEL   | 21     | HUE   | 18 |
| PIP connections          | 15                 | LANGUAGE   | 22     | MODE  | 18 |
| PIP operations           |                    | PARENTAL CONTROL   | 21     | PICTURE   | 18 |
| AUDIO                    | 15                 | TILT CORRECTION  | 22     | SHARPNESS   | 18 |
| CH+/-                    | 15                 | VIDEO LABEL  | 21     | VOL +/-   | 12 |
| FREEZE                   | 15                 | Setting up TV  | 12     | VTR   | 28 |
| PIP                      | 15                 | SHARPNESS  | 18     | XDS   | 22 |
| POSITION                 | 15                 | SLEEP button   | 13     |   |    |
| SWAP                     | 15                 | SPEAKER  |        |   |    |
| TV/VIDEO                 | 15                 | ON   | 19     |   |    |
| Programming the remote   | 28, 30             | OFF  | 19     |   |    |
| <b>R</b>                 |                    | Specifications   | 32, 33 |   |    |
| RATINGS                  |                    | SWAP button  | 15     |   |    |
| ENGLISH                  | 25                 | SYSTEM OFF button  | 14     |   |    |
| FRENCH                   | 25                 | <b>T, U</b>  |        |   |    |
| MOVIE                    | 24                 | TILT CORRECTION  | 22     |   |    |
| TV                       | 24                 | TIMER menu operations  |        |   |    |
| U.S.A.                   | 25                 | CURRENT TIME SET   | 20     |   |    |
| UNRATED                  | 24                 | DAYLIGHT SAVING  | 20     |   |    |
| Remote control           | 11, 13             | ON/OFF TIMER   | 20     |   |    |
| FUNCTION buttons         | 13                 | TREBLE   | 19     |   |    |
| Illustration             | inside front cover | Troubleshooting  | 31, 32 |   |    |
|                          |                    | TV (FUNCTION) button   | 13     |   |    |
|                          |                    | TV POWER button  | 13     |   |    |
|                          |                    | TV/VIDEO button  | 14     |   |    |
|                          |                    | TV OUT   | 9      |   |    |